

CH	BANK 9	CH	BANK 11	CH	BANK 13	CH	BANK 15
1	727.800	1	731.000	1	734.200	1	737.400
2	727.900	2	731.100	2	734.300	2	737.500
3	728.000	3	731.200	3	734.400	3	737.600
4	728.100	4	731.300	4	734.500	4	737.700
5	728.200	5	731.400	5	734.600	5	737.800
6	728.300	6	731.500	6	734.700	6	737.900
7	728.400	7	731.600	7	734.800	7	738.000
8	728.500	8	731.700	8	734.900	8	738.100
9	728.600	9	731.800	9	735.000	9	738.200
10	728.700	10	731.900	10	735.100	10	738.300
11	728.800	11	732.000	11	735.200	11	738.400
12	728.900	12	732.100	12	735.300	12	738.500
13	729.000	13	732.200	13	735.400	13	738.600
14	729.100	14	732.300	14	735.500	14	738.700
15	729.200	15	732.400	15	735.600	15	738.800
16	729.300	16	732.500	16	735.700	16	738.900

CH	BANK 10	CH	BANK 12	CH	BANK 14	CH	BANK 16
1	729.400	1	732.600	1	735.800	1	739.000
2	729.500	2	732.700	2	735.900	2	739.100
3	729.600	3	732.800	3	736.000	3	739.200
4	729.700	4	732.900	4	736.100	4	739.300
5	729.800	5	733.000	5	736.200	5	739.400
6	729.900	6	733.100	6	736.300	6	739.500
7	730.000	7	733.200	7	736.400	7	739.600
8	730.100	8	733.300	8	736.500	8	739.700
9	730.200	9	733.400	9	736.600	9	739.800
10	730.300	10	733.500	10	736.700	10	739.900
11	730.400	11	733.600	11	736.800	11	740.000
12	730.500	12	733.700	12	736.900	12	741.000 .3
13	730.600	13	733.800	13	737.000	13	741.000 .2
14	730.700	14	733.900	14	737.100	14	741.000 .3
15	730.800	15	734.000	15	737.200	15	739.000 .4
16	730.900	16	734.100	16	737.300	16	739.000 .5

The 16 position rotary switch is used to select "BANK" and "Channel".

There are 16 BANKS and each has 16 Channels for 256 frequencies in all.

The LED displays the BANK number in green, and a red "fadeout" when transmitter is powered off.

A steady red LED indicates that the transmitter has not locked on to the frequency, and is therefore not transmitting (the power amp will be disabled until frequency lock is achieved).

The pushbutton, when pressed momentarily, turns the transmitter on or off and if held for more than 5 seconds, will set the BANK to the current rotary switch setting.

Typical operation is as follows:

Momentarily press the pushbutton. The green LED will flash the previously used BANK (3 flashes = BANK 3). The transmitter is now powered on and the rotary switch will indicate the Channel. If the red LED is OFF the transmitter is in operation.

Rotating the Channel selector will change the Channel. To change the BANK, set the rotary switch to the appropriate BANK number and press the button until the green LED flashes the new BANK. Then set the rotary switch to the desired channel.

To power off the transmitter, momentarily press the button. The red LED will light and fade out indicating the transmitter has turned off.

It is normal on power up for the transmitter to take 1 to 5 seconds to lock onto frequency; this will be indicated by the red LED

CH	BANK 1	CH	BANK 3	CH	BANK 5	CH	BANK 7
1	715.000	1	718.200	1	721.400	1	724.600
2	715.100	2	718.300	2	721.500	2	724.700
3	715.200	3	718.400	3	721.600	3	724.800
4	715.300	4	718.500	4	721.700	4	724.900
5	715.400	5	718.600	5	721.800	5	725.000
6	715.500	6	718.700	6	721.900	6	725.100
7	715.600	7	718.800	7	722.000	7	725.200
8	715.700	8	718.900	8	722.100	8	725.300
9	715.800	9	719.000	9	722.200	9	725.400
10	715.900	10	719.100	10	722.300	10	725.500
11	716.000	11	719.200	11	722.400	11	725.600
12	716.100	12	719.300	12	722.500	12	725.700
13	716.200	13	719.400	13	722.600	13	725.800
14	716.300	14	719.500	14	722.700	14	725.900
15	716.400	15	719.600	15	722.800	15	726.000
16	716.500	16	719.700	16	722.900	16	726.100

CH	BANK 2	CH	BANK 4	CH	BANK 6	CH	BANK 8
1	716.600	1	719.800	1	723.000	1	726.200
2	716.700	2	719.900	2	723.100	2	726.300
3	716.800	3	720.000	3	723.200	3	726.400
4	716.900	4	720.100	4	723.300	4	726.500
5	717.000	5	720.200	5	723.400	5	726.600
6	717.100	6	720.300	6	723.500	6	726.700
7	717.200	7	720.400	7	723.600	7	726.800
8	717.300	8	720.500	8	723.700	8	726.900
9	717.400	9	720.600	9	723.800	9	727.000
10	717.500	10	720.700	10	723.900	10	727.100
11	717.600	11	720.800	11	724.000	11	727.200
12	717.700	12	720.900	12	724.100	12	727.300
13	717.800	13	721.000	13	724.200	13	727.400
14	717.900	14	721.100	14	724.300	14	727.500
15	718.000	15	721.200	15	724.400	15	727.600
16	718.100	16	721.300	16	724.500	16	727.700




PROGRAMMING MANUAL
FOR THE QT-256
BLOCK #2

FC ID: Q5N-QT256
Industry Canada ID: 4614A-QT256

MADE IN CANADA

WWW.Q5X.COM