

Q5X[®]

Next Steps



Check you included hardware against the quickstart guide.



Visit www.Q5X.com/support



Register the warranty.



Download digital manuals and additional resources.

Q5X[®] Have questions?
We're listening.

| www.Q5X.com | info@Q5X.com | 519-675-6999 |

Q5X[®]

BELTMIC

QT-5100B Quick Start Guide



Q5X Support

Scan here to visit our online support and get access to FAQ, firmware updates, warranty registration, and more.



| www.Q5X.com | info@Q5X.com | 519-675-6999 |

DOCID-M-010-4.0

Q5X[®] Quick Start Guide BELTMIC QT-5100B

This Quick Start Guide is an overview. Users are asked to review the entire manual for detailed instructions

Included Hardware:

- Carrying pouch.
- BeltMic transmitter
- Micro USB charging cable

Users Also Need:

- Q5X Gateway (remote control)
 - Handheld MicCommander (QG-H2) or
 - Network Gateway (QG-N3)
- Analog receiver
- Microphone (1-pin Lemo connector)

User Tips:

When using the BeltMic, it is suggested that a strain relief method be used to ensure that there is no direct pulling force on the microphone connector during use or during removal.

One method is to loop the microphone cable back and tape the connector to the edge of the transmitter.

Q5X[®]

Prepare the BeltMic Transmitter:

Bring the transmitter out of storage mode (minimal battery draw) and into standby mode (detectable but the UHF radio is off) using either method below:

- Hold the ON/OFF button until the status LED changes from flashing rapidly to slowly, or
- Plug and unplug a powered micro USB charging cable into the side of the transmitter.
- Connect the 1-pin Lemo microphone

Prepare the Gateway remote control (H2 or N3):

- Install the antenna on the top. (NEVER power the unit without the antenna in place.)
- Power the Gateway as instructed in its manuals.
- Turn on the unit by pressing the power button.

Pair the BeltMic and Gateway remote control:

- The screen on the Gateway displays the serial number of paired transmitters.
- Press the <MENU> button to either scan for transmitters or add the serial number found on the PlayerMic antenna.

Adjust:

- Set the functions in the two transmitter menus of the Gateway. Screen one includes frequency, power On/Off, battery level, mic mute/live and mic gain.
- Screen two includes: transmitter name, group, RF power, 2.4GHz channel, storage and reboot.


Battery Life:

8 hrs @ 2/10mW

Dimensions:

53.5mm x 42mm x 18.5mm

Hardware Diagram:

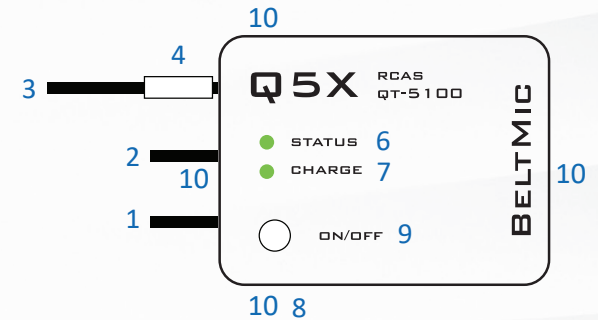

Key:

1. **2.4 G antenna:** For the RCAS control channel.
2. **Audio input:** Connects to a waterproof microphone with a 6-pin Lemo connector.
3. **UHF antenna:** For RF signal transmission.
4. **Serial number:** The unique number for RCAS ID and control is on the back of the AquaMic.
5. **N/A**
6. **Status LED:** See manual for details on LED patterns and colours.
7. **Charge LED:** Red = charging, green = charged and flashing red/green = error.
8. **Charging port:** AquaMic charges through the same connector as the audio input using the charge dongle.
9. **On/Off button:** There is no manual power control button on the AquaMic to maintain the waterproof seal.
10. **Belt clip holes:** Allows vertical and horizontal placement.